

Huizhou Great-Will Industrial Co.,Ltd.

Contact person: Winnie Huang

Email: sales04@great-will.com.cn

Whatsapp/Mobile/Wechat: +86-13413053028 Skype: GW-Winnie huang

AT2 GPS TRACKER COMMAND LIST

Command List		Description	Command	
			<i>Context</i>	<i>Reply</i>
1	Admin	Set Admin Number	BD,000000,Phone number#	BD OK!
2	Delete Admin	Delete Admin Number	BD,00#	Delete !
3	Set APN	Set APN	APN, apn name [,username, password]#	APN OK !
4	Locating mode	Set working mode	LMT,mode#	LMT,1# OK !

5	Static Interval	Set upload interval time	HBT,upload interval in minutes#	HBT OK!
6	Over speed	Set over speed alarm	OS,speed#	OS OK!
7	Vibration alarm	Set vibration alarm	VA,ON#	VA OK!
8	Alarm mode	Set alarm mode	MC,alarm mode#	MC OK!
9	Voice Monitor	Spy the voice around device	JT#	Call center number directly
10	Set server	Set IP	IP#domain name or IP address#port#	IP OK!
11	Set time zone	Set time zone	GMT, location, time zone[,half time zone]#	GMT OK!

12	URL	Check the location link of Google map	URL	Reply with google link
13	123	Check the address	123	Reply with current address
14	STATUS	Checking the device's working status.	ST#	Reply with device status
15	PARAM	Check the settings and the default parameter.	QP#	Reply with param details
16	LANG	Set language	LANG,0#	LANG OK!
17	Reset	Reset Device	RESET#	RESET OK!
18	Factory	Back to factory mode	RFS#	RFS OK!

Default password:000000

GPS Talks



GREAT-WILL

Example

BD,000000,13500135000#
(Can set one admin number)

BD,00#

1: APN,intenet,123,123#
2: APN, cmnet# (Without user name
and password)

Three working mode

- 1)LMT,0# (Normal mode)
- 2) LMT,1# (Save power mode)
- 3) LMT,2# (Deep sleep mode)

Device upload location every 1
min,10min,once a day in moving
status, suggest use model 1:LMT,1#

HBT,5#

(Time scope: 1~120 minutes; The device has 3D transmission and the default time interval are 10 minutes,save power mode.)

OS,80#

(The speed scope is form 30-180km/h, if the speed is no this cope, the alarm is off.(Default is off ,need set y yourself)

OS,OFF#

(Shut down over speed alarm)

VA,ON#

VA,OFF#(default off)

MC,1#

Alarming : 1, texting (Default) 2, calling, 3 calling and texting,0,turn off all alarm.

Must set the center number and receiving number.)

JT#

IPwww.gpsgreat.com#88#

(If use ours ,no need to set again)

GMT,E,8#

GMT,E,5,30#

URL
123
ST# IMEI: 888xxxxxxxxx888 MC: 1(alarm mode) VA: 0 (vibration alarm switch) OS: 0 (overspeed alarm switch) LA: 0 HBT: 10 (Upload interval) LANG: 1 (language) GMT: E8 (time zone)
QP# IMEI: 888xxxxxxxxx888 APN: cmnet IP: www.gpsgreat.com/88 LMT,0# (working model) CENTER: (center number) SOC4: (SOCKET connection status) GSM: signal status GPS: positioning status BAT: 3.8V (battery voltage)
LANG,0# (Send it to change to English)
RESET#
Not use without factory agree



GPS Talks